

# CHAIR ASSEMBLY INSTRUCTION


## Step 3

Attach right chair arm (U) to chair seat (R) and chair back rest (S) with two round head screws M6×15 (BB) and a round head screw (AA), using hexagon socket wrench (CC) as Fig.3.

### Hardware Used

Item	Description	Qty	Picture
AA	Round Head Screw M6 x 30	1	
BB	Round Head Screw M6 x 15	2	
CC	Hexagon Socket Wrench	1	


Fig.3

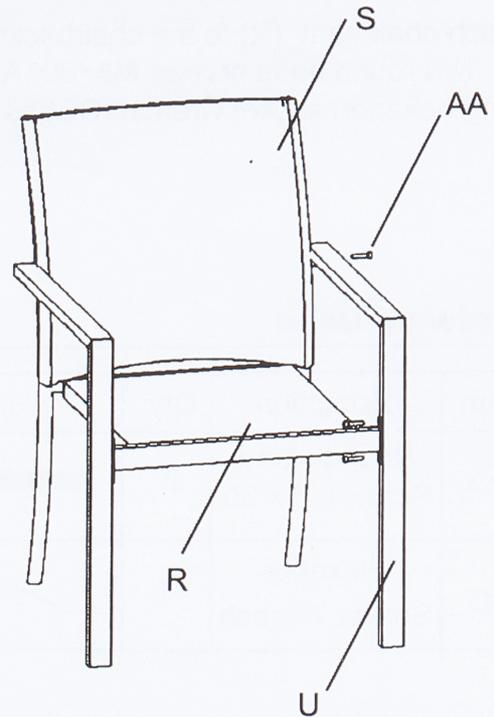

# CHAIR ASSEMBLY INSTRUCTION

## Step 1

Attach chair seat (R) to the chairbackrest (S) with two round head screws M6×30 (AA), using hexagon socket wrench (CC) as Fig.1.

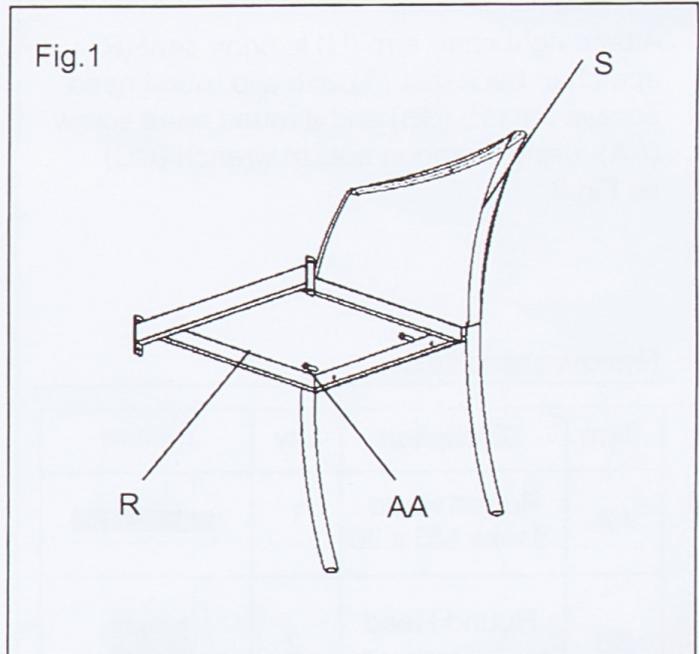


## Hardware Used

Item	Discription	Qty	Picture
AA	Round Head Screw M6 x 30	2	
CC	Hexagon Socket Wrench	1	

## Step 2


Attach left chair arm (T) to chair seat (R) and chair back rest (S) with two round head screws M6×15 (BB) and a round head screw (AA), using hexagon socket wrench as fig.2.

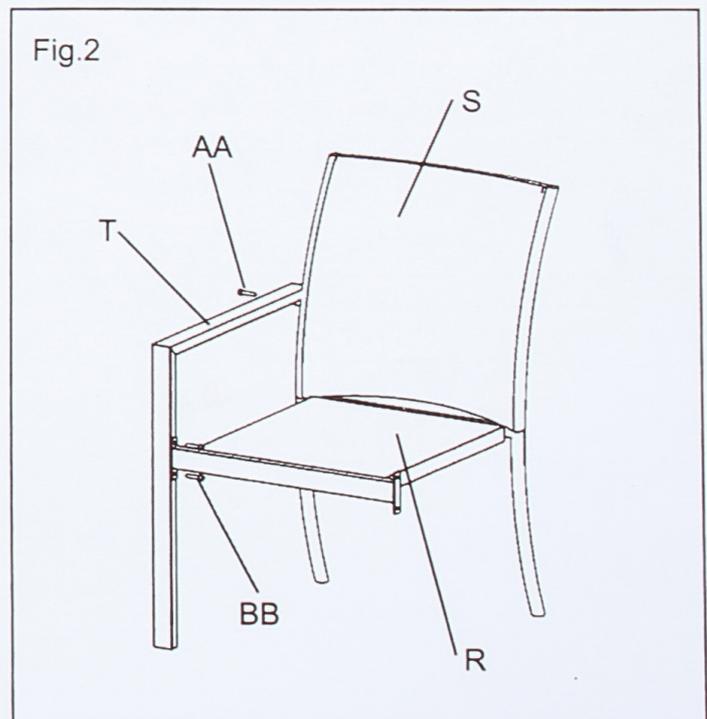

## Hardware Used

Item	Discription	Qty	Picture
AA	Round Head Screw M6 x 30	1	
BB	Round Head Screw M6 x 15	2	
CC	Hexagon Socket Wrench	1	

# TOOLS AND PARTS

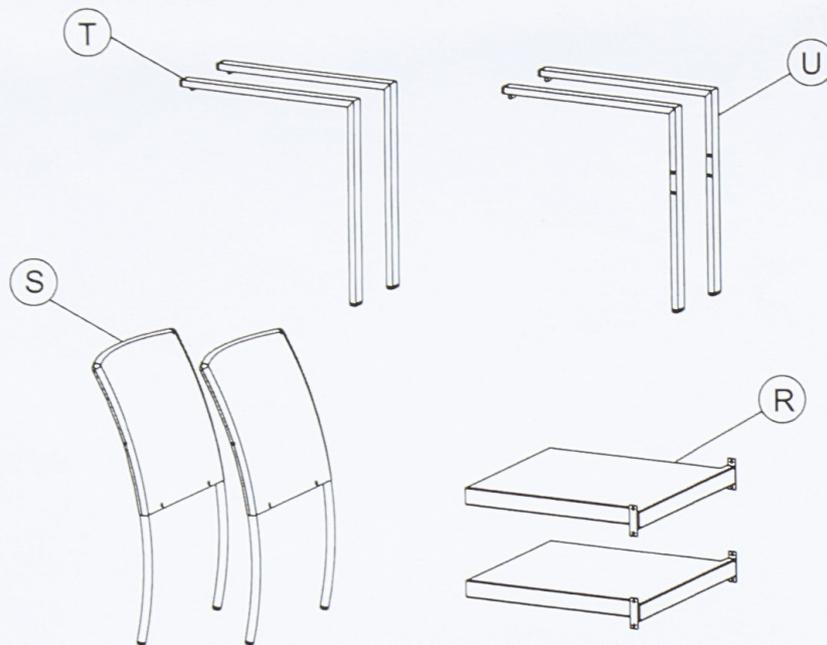

Item	Discription	Picture	Qty
R	Chair Seat		2
S	Chair Back Rest		2
T	Left Chair Arm		2
U	Right Chair Arm		2

# HARDWARE CONTENTS

Item	Discription	Picture	Qty
AA	Round Head Screw M6 x 30		8
BB	Round Head Screw M6 x 15		8
CC	Hexagon Socket Wrench		1